

折疊

Monitor Display Icon / Description	
	Tire
	Sensor low battery
	Monitor battery indicator
	Alert
	Solar charging
BAR/PSI	Pressure unit (Selectable)
°C/°F	Temperature unit (Selectable)
8.8	Tire pressure value
18.8	Tire temperature value

折叠

1. After 10 minutes of no vehicle vibration detected the monitor goes into sleep mode, and can be awakened by vehicle vibration and starts receiving data from sensors. At the start some data might be missing in monitor, it'll be displayed when tire pressure or temperature updated.
2. Monitor and sensors transmit signals by wireless, with long effective transmission distance and anti-interference protection.
3. It's a normal situation that the tire pressure and temperature changing all the time during driving, as result of air expansion and contraction.
4. Tire air leakage with time is a normal phenomenon and is not caused or affected by TPMS.
5. For any question or problem of installation, please contact with local distributors.

折叠

Turn off monitor, pressing <-> to power on again, within 3 seconds pressing <SET> until a beep issued, red backlight flash once, monitor is restored to original factory default setting.

折疊

Temperature value flashing

Faulty tire icon flashing

Alert icon flashing

High temperature alert

The diagram shows the instrument cluster with the following details:

- Faulty tire icon flashing:** A line points to the tire icon in the center of the display, which is shown with a wavy line inside, indicating a problem with the tire pressure sensor.
- Sensor low battery icon flashing:** A line points to the battery icon in the center of the display, which is shown with a wavy line inside, indicating a low battery level for the sensor.

折疊

折疊

- 1) Please follow the instruction manual in use of product, factory is not responsible for any consequences caused by misuse out of instruction manual.
- 2) Please install product according to instruction manual, factory is not responsible for any consequences caused by un-proper installation out of instruction manual.
- 3) Please set the alert threshold values according to specifications and parameters provided by tire manufacturer and its distributors, TPMS factory is not responsible for any consequences caused by faulty setting of the alarm threshold.
- 4) TPMS installation must be handled by technicians, be cautious of sensors in tire during maintenance and detaching/loading tire.
- 5) This instruction manual is subject to further revisions in need without prior notification, product images in this manual is for learning of instruction, actual products to prevail in kind.

AUTOTECH		物料类型	英文三个按键 中性通用说明书	尺 寸 (mm)	折叠后尺寸： 140*100MM
输出日期	2017-4-19				
制 作	石月兵	材 质	128G铜版纸单色印刷		
备 注	正反面 折叠式				